

Beweeg de spindel omhoog



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=nl:x200:raise_spindle_key&rev=1741726215

Last update: **2025/03/11 21:50**

