

"Autoplate" menu option (F5)

How it works

The Autolayout method allows the user to quickly create a layout containing multiple lines, all of which are evenly distributed proportionally to the available plate size. Users can toggle the left and right margin spacing of the available text area as well as adjust the text occupancy percentage, determining optimum line height and spacing between lines. This feature is particularly useful for pendants and signs where there is a defined area to create a layout for.

Access through...

- F5 shortcut key on the keyboard
- the Plate menu and selecting 'Autolayout'.

Autolayout Screenshot

The dialog allows the user to configure the size of the plate, and the number of lines. The preview pane on the right will update to reflect the changes made. Individual line heights can be tweaked by referring to the line details table at the bottom by either adjusting the ratio value of the line or locking in a specific line height. Unless the tick box at the bottom is ticked, the autoplate will reformat any existing lines on the plate to suit the new layout defined.

From:
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=symmetry:en:option_autoplate&rev=1649417560

Last update: 2022/04/08 13:32

