

"Autoplate" menu option (F5)

The **Autoplate** method allows the user to quickly create a layout containing multiple lines, all of which are evenly distributed proportionally to the available plate size. Users can toggle the left and right margin spacing of the available text area as well as adjust the text occupancy percentage, determining optimum line height and spacing between lines. This feature is particularly useful for pendants and signs where there is a defined area to create a layout for.

Autoplate Screenshot



The dialog allows the user to configure the size of the plate, and the number of lines. The **Line Details** section Individual line heights can be tweaked through the line details table at the bottom by either adjusting the ratio value of the line or locking in a specific line height. Unless the tick box at the bottom is ticked, the autoplate will reformat any existing lines on the plate to suit the new layout defined. The preview pane on the right will update to reflect the changes made.

Line details

- **Text Occupies**
- **Margin Percent**
- **Top Margin**
- **Bottom Margin**
- **Left Margin**
- **Right Margin**

Line details table

- **Line:**
- **Ratios**
- **Line Ht**
- **Locked** (checkbox)

Access through...

- [F5] function key on the keyboard
- the Autoplate icon  in the icon menu on the left
- the **Plate** menu and selecting **Autolayout**.

Last
update: symmetry:en:option_autoplate https://manualscyborg-engraverscom.webhosting.be/doku.php?id=symmetry:en:option_autoplate&rev=1649425794
2022/04/08 15:49

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=symmetry:en:option_autoplate&rev=1649425794

Last update: **2022/04/08 15:49**

