


3.4.2.2. Entering engraving depths in Symmetry and using those while engraving

In Symmetry it is possible to enter the desired engraving depths. This happens in the following window (menu "Options - Pass Depths").

The numbers in the different fields function as an example:

When engraving the job the cutter will first perform a roughing pass at 0.4 mm depth, and after that a cleaning pass at 0.1 mm depth.

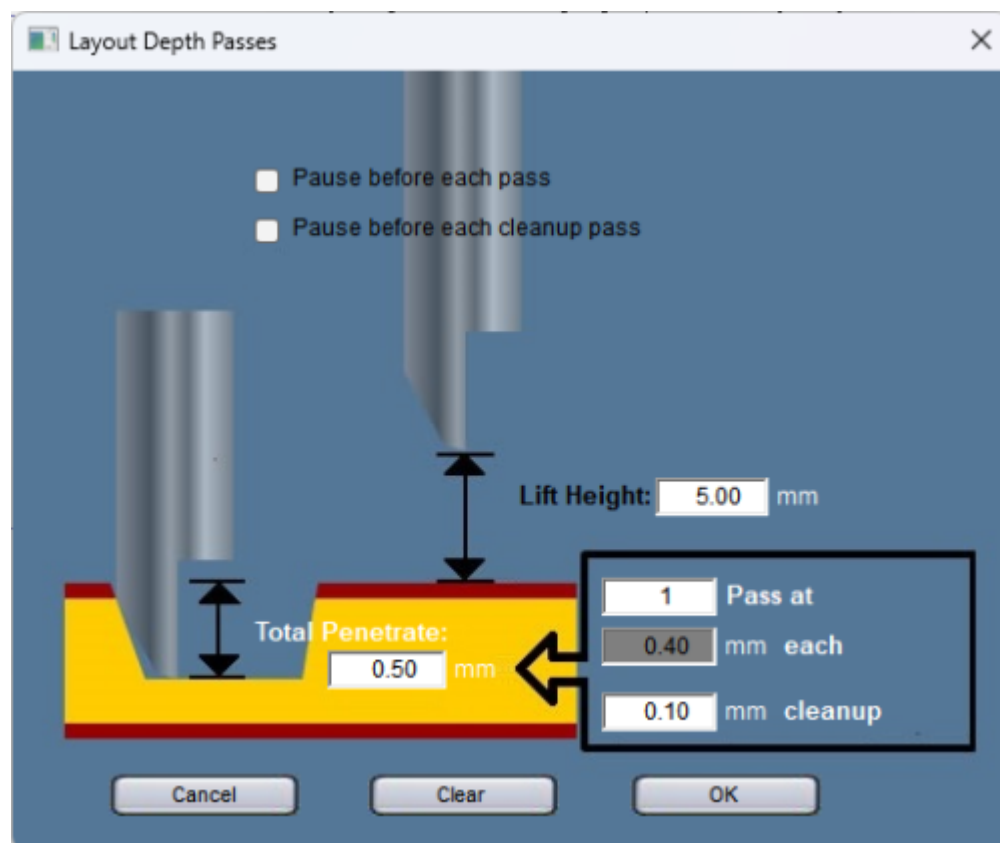

There is one important condition:

The Cyborg pendant software has to be set in such a way that the machine reads and executes the depths in the cnc-file.

In the CNC-field "Z-move values" the option "From Job File" has to be active. (see image below)

Dialog

Save

CNC V4.03.63

Version 2.5.2

Job

CNC

Arc Mode

Incremental

Z Move Values

From Job File

Z Depth Value

2,00

Z Lift Value

4,00

Z Dwell Time (msec)

0

Hot Watch

InBox Folder

C:/CyborgPendent/InBox

...

OutBox Folder

C:/CyborgPendent/OutBox

...

Refresh Interval

1 second

Surfacing

Auto Seek Feed (mm/sec)

6.000

Z lift after setting surface

5.000

Z Max diff while mapping

2.000

Ga verder naar [3.4.2.2. De veerdruk blokkeren om zonder diepteneus te graveren.](#)

Ga verder naar [de inhoudstafel.](#)

From:
<https://manualscyborg-engraverscom.webhosting.be/> - cyborg-engravers

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=en:x200:how_to_use_symmetry_engraving_depths&rev=1744982478

Last update: 2025/04/18 15:21

