


Option de menu "Préférences"

La fenêtre Préférences

Les paramètres et valeurs qui peuvent être changés dans la fenêtre **Préférences**:

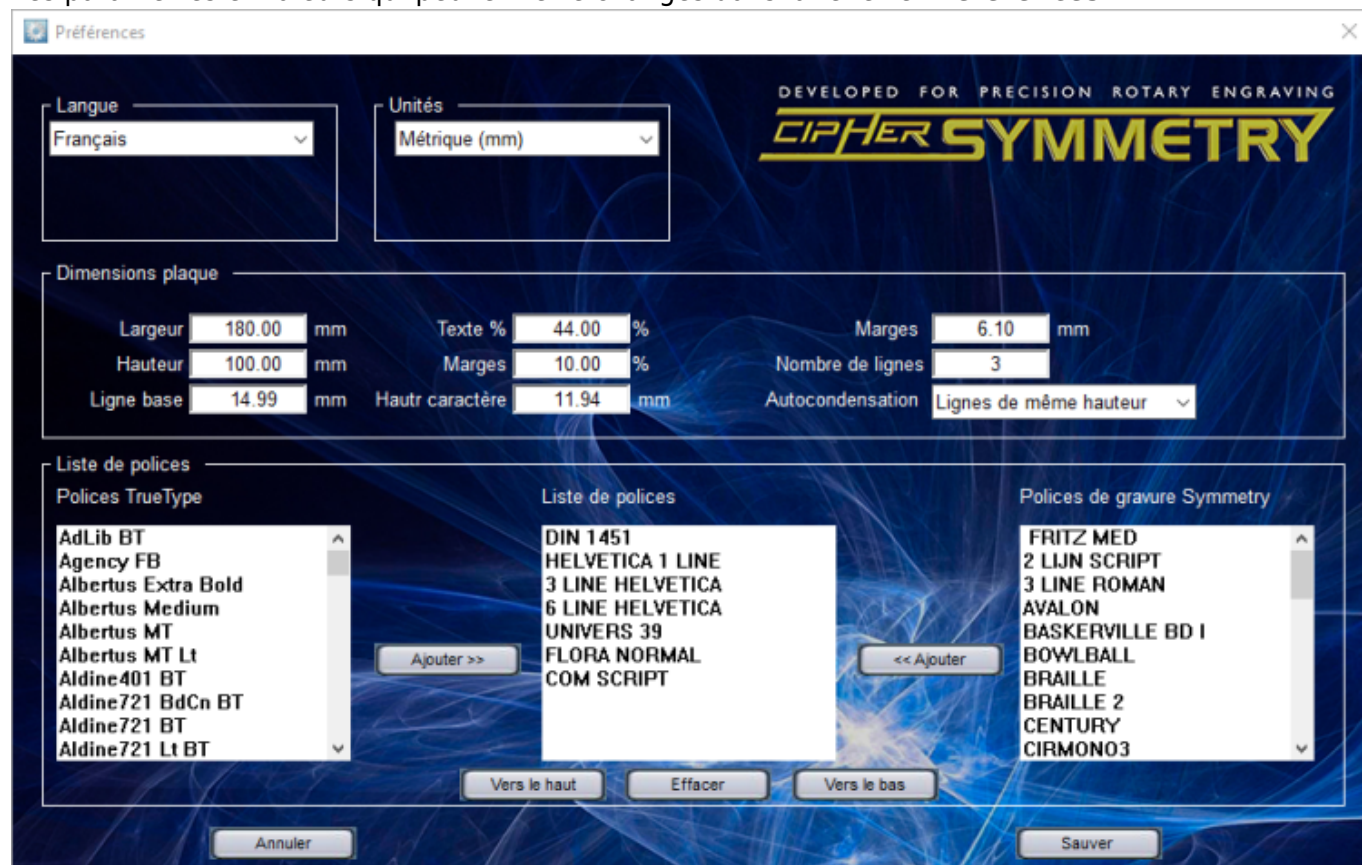

- **Langue:** Ouvre un menu déroulant montrant toutes les langues disponibles. En ce moment, les langues suivantes sont à votre disposition:
 - Anglais (English)
 - Français
 - Néerlandais (Nederlands)
- **Unités:**
 - Métrique (mm)
 - Impérial (Pouces)

The **Paramètres de plaque**:

- **Largeur**
- **Hauteur**, the standard Width and Height that will be shown as the **Plate Dimensions** in the **Autoplate** screen, as well as the standard dimensions when starting a **New Job**.
- Baseline
- **Occupation texte** (exprimé en %): the standard percentage of the total plate surface which will be covered by the text lines.
- **Marges** (exprimé en %): the standard percentage of the total plate surface which will be
- Text height

- Margins
- **Number of lines**: the standard number of lines when activating the **Autoplate** option.
- **Condensation** refers to the standard **Condense Mode** setting.

Access through

- Startup screen - Preferences
- File menu - "**Preferences**" option

From:
<https://manualscyborg-engraverscom.webhosting.be/> - **cyborg-engravers**

Permanent link:
https://manualscyborg-engraverscom.webhosting.be/doku.php?id=fr:symmetry:option_preferences&rev=1663158573

Last update: **2022/09/14 14:29**

